
Import

32U — HEAVY DUTY VALVE AND SERVICE BOXES AND COMPONENTS

Revised 02/2025 (Current revisions for the noted Standards apply)

SIZES:	Adjustable slip and screw type with standard assembly lengths ranging from 19"–72" (lengths noted do not include the addition of risers, extensions, and/or bases). See the catalog or List Price guide for accessories, lids, bases, risers, meter covers, etc.	
STANDARDS:	Produced with Class 35 cast iron in accordance with and meeting all applicable terms and provisions of ASTM A48. All Tyler Union valve boxes when properly installed are suitable for use in conjunction with projects utilizing American Association of State Highway and Transportation Officials (AASHTO) standards and provisions.	
INSTALLATION:	Per AWWA M44, Manual of Water Supply Practices.	
COATING:	The asphaltic bituminous coating is applied to a minimum thickness of 1.5 mil, and the coating once dry is neither brittle when cold or sticky when exposed to the sun.	

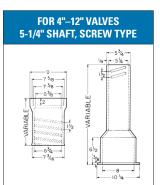

CAST IRON - 2 PC.

Components

10T + 15B

10T + 24B

16T + 24B

16T + 30B

16T + 36B

26T + 30B

26T + 36B

26T + 24B + #60 Ext

26T + 36B + #60 Ext


Extens

12" VALVES FT, SLIP TYPE


ension

6850 SCREW TYPE VALVE BOX 6855 SLIP TYPE VALVE BOX CAST IRON - 2 PC.

xtension Height	Components	Extension Height	
19–22	10T + 15B	19–22	
27–32	10T + 24B	27–32	
27–37	16T + 24B	27–37	
33–43	16T + 30B	33–43	
39–50	16T + 36B	39–50	
36–52	26T + 30B	36–52	
39–60	26T + 36B	39–60	
53–71	26T + 24B + #60 Ext	53–71	
64–82	26T + 36B + #60 Ext	64–82	

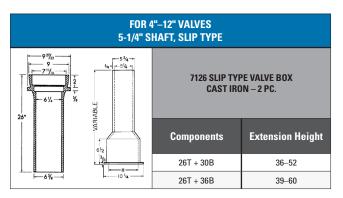


Tyler Union Waterworks Customer Service 833-723-1135 customer.service@tylerunion.com www.tylerunion.com

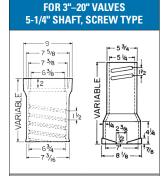

6860 SCREW TYPE VALVE BOX CAST IRON - 3 PC.

Components	Extension Height		
10T + 12B	27–37		
10T + 18B	33–42		
16T + 24B	39–49		
16T + 30B	45–54		
16T + 36B	51-60		
26T + 30B	45-66		
26T + 36B	51–72		
16T + 24B + #60 Ext	63–72		
26T + 24B + #60 Ext	63-84		
26T + 36B + #60 Ext	74–94		
NOTE: Base required, order separately			

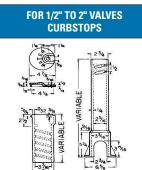

6500 SCREW TYPE **CURB/SERVICE BOX**

Components	Extension Height
12T + 12B	15–21
12T + 15B	18–24
15T + 15B	21–27
15T + 21B	24–33
15T + 27B	30–39
18T + 27B	30-42
18T + 33B	36-48
24T + 33B	36–54
24T + 39B	45-60
30T + 33B	41-64

T = TOP

B = BOTTOM



EXT = EXTENSION